


STANDARD 60

FOR MORE INFORMATION VISIT OUR WEBSITE WWW.AQUATLANTIS.COM

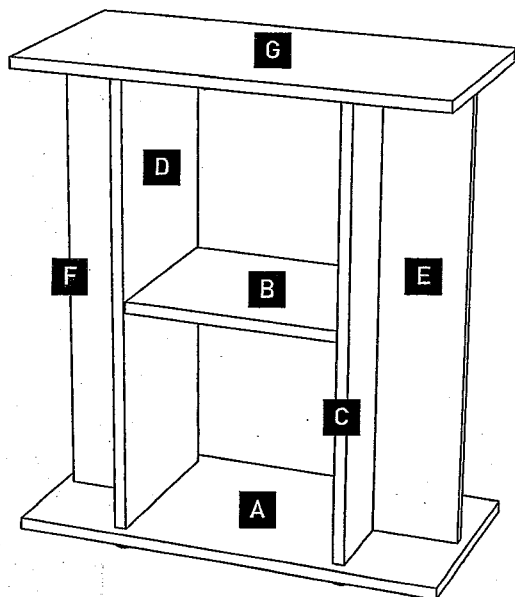

16mm

Dimensions
600 x 300 x 700mm



≈15 min

A 600 x 300mm

B 299 x 250mm

C 653 x 260mm

D 653 x 260mm


E 653 x 120mm

F 653 x 120mm

G 600 x 300mm

Included Equipment
Équipement Inclus

x1




x20



x7




Equipment Not Included
Équipement Non Inclus




1

x20

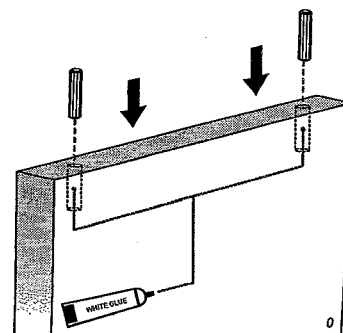


2


x7

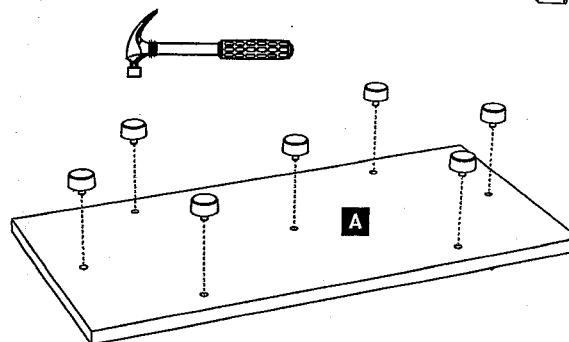

3

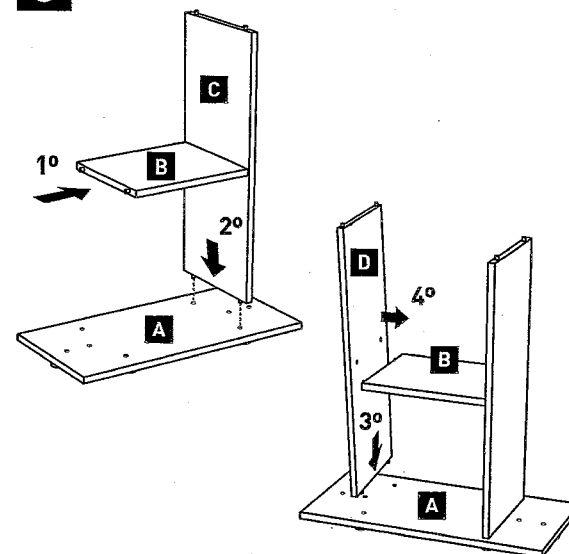


4

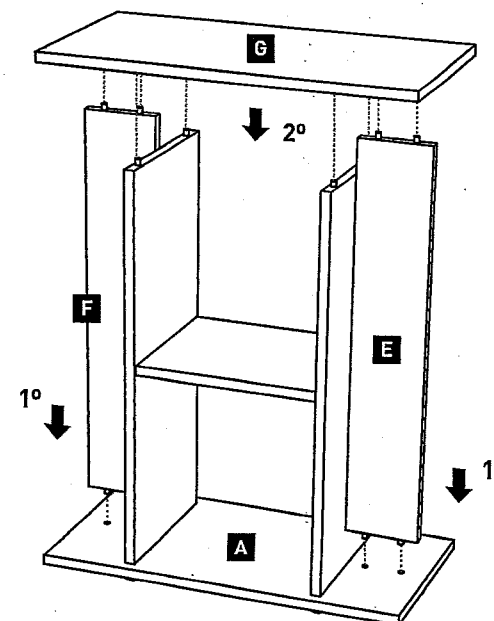

DE: SCHRANK FÜR AQUARIUM - **ES:** MUEBLE PARA ACUARIO - **FR:** MEUBLE POUR AQUARIUM
GB: CABINET FOR AQUARIUM - **GR:** ΒΑΣΗ ΕΝΥΠΕΙΟΥ - **IT:** MOBILE PER ACQUARIO
NL: MEUBEL VOOR AQUARIUM - **PT:** MÓVEL PARA AQUÁRIO - **RU:** Тумба для аквариума

ID:30007


STANDARD 50_60x30x70

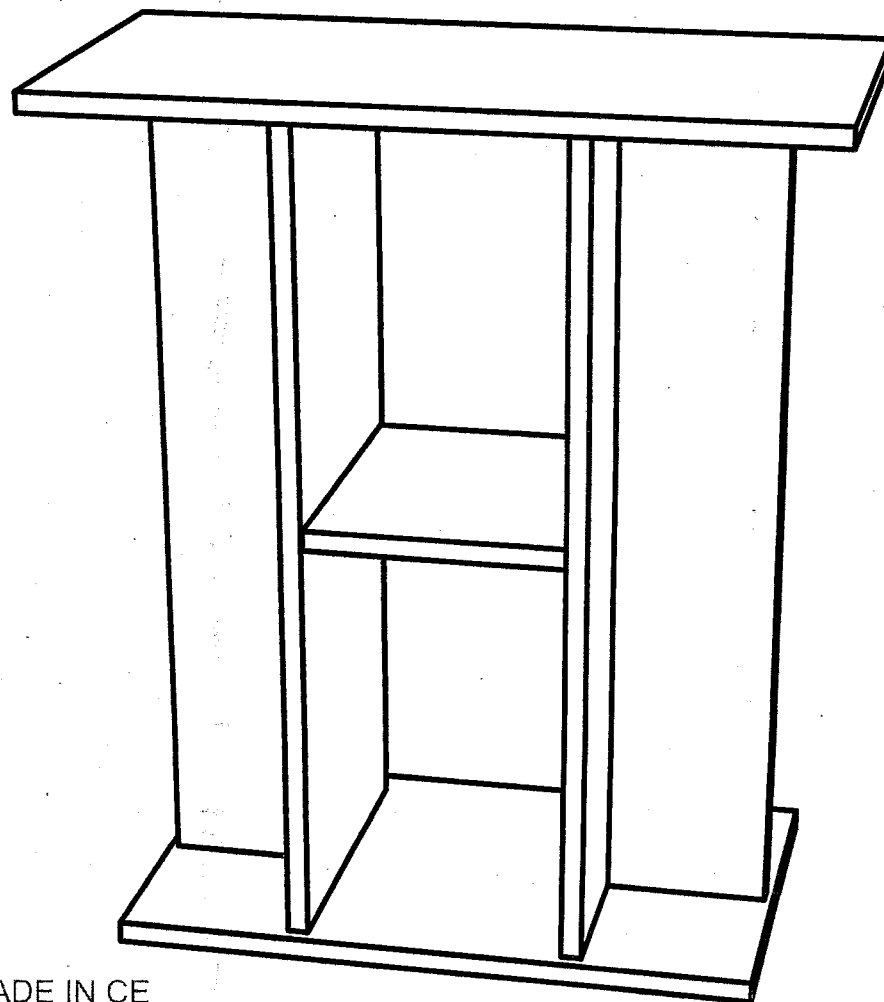


- A** – 500 x 300
- B** – 260 x 650
- C** – 200 x 250
- D** – 260 x 650
- E** – 120 x 650
- F** – 120 x 650
- G** – 600 x 300

Included:

20x 

1x  WHITE GLUE


 **AQUARIUM**
aquatantis
www.aquatantis.com




15 min

MADE IN CE

I

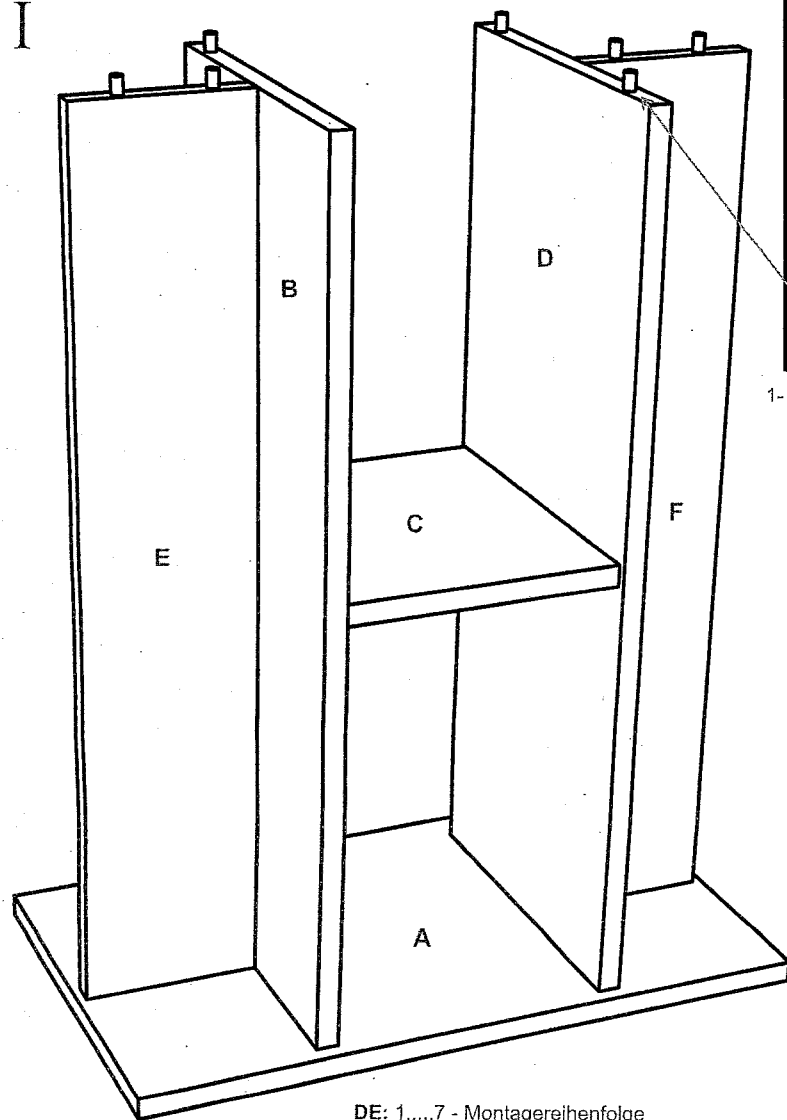

1- Put GLUE in the holes
for the wood dowell pins,
and then put the wood
dowell PINS in their holes




DE: 1,....,7 - Montagereihenfolge
ES: 1,....,7 - Secuencia de montaje
FR: 1,....,7 - Séquence d'assemblage
GB: 1,....,7 - Assembly sequence
GR: 1,....,7 - Ακκκκκκκκκ τκκ σκκκκκκς κκκ
IT: 1,....,7 - Sequenza di montaggio
NL: 1,....,7 - Volgorde van montage
PT: 1,....,7 - Sequência de montagem
RU: 1,....,7 - Порядок сборки

Glue - A - B - C - D - E - F
1 - 2 - 3 - 4 - 5 - 6 - 7

II

DE: G - Montagereihenfolge
ES: G - Secuencia de montaje
FR: G - Séquence d'assemblage
GB: G - Assembly sequence
GR: G - Ακκκκκκκκκ τκκ σκκκκκκς κκκ
IT: G - Sequenza di montaggio
NL: G - Volgorde van montage
PT: G - Sequência de montagem
RU: G - Порядок сборки

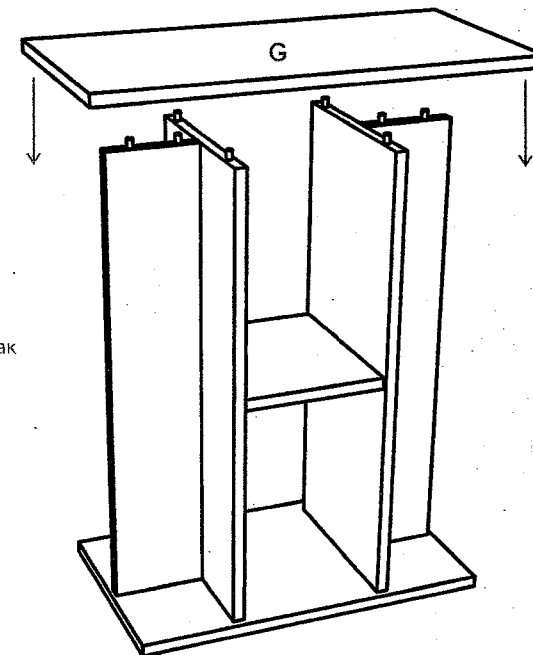

III

